

Civil 3D 2020 Networks



Civil 3D 2020 - Networks

⇒ Pipe Networks and part builder

- **Pipe Networks**

- Understanding pipe networks
- Pipe Network Settings
- Creating Pipe Networks
- Editing Pipe Networks
- Pipe Network Properties
- Displaying Pipe Networks
- Pipe Network Interferences
- Pipe Network Parts Catalogs
- Pipe Network Parts Lists
- Pipe Network Part Rules
- Pipe Network Part Labels

- **Part Builder**

- Understanding Part Builder
- Creating Parts with Part Builder
- Editing Parts with Part Builder
- Testing and Validating Parts

Civil 3D 2020 Networks



Civil 3D 2020 - Networks

⇒ **Infrastructure content Authoring**

- Open the Infrastructure Parts Editor
- Create a new part catalog
- Add or modify a part family
- Modify part family properties
- Review or modify shape details
- Add a new parametric model to the Parts Editor
- Review or modify detailed part family properties
- Add or modify part sizes
- Validate part family sizes
- Add or modify assemblies
- Publish a parts catalog to Autodesk InfraWorks or Autodesk Civil 3D
- To use pressure pipe content from AutoCAD Plant3D

⇒ **Pressure Networks**

- Getting Started with Pressure Networks
- Creating Pressure Networks in Plan View
- Editing Pressure Networks in Plan View
- Working with pressure networks in profile view
- Editing pressure networks in profile view
- Validate pressure networks
- Pressure Networks labels and Tables
- Content catalog Editor