



尺寸不对处理/Size Calibration

1. 图形尺寸与实际切割尺寸不对/Design size different with cutting size.

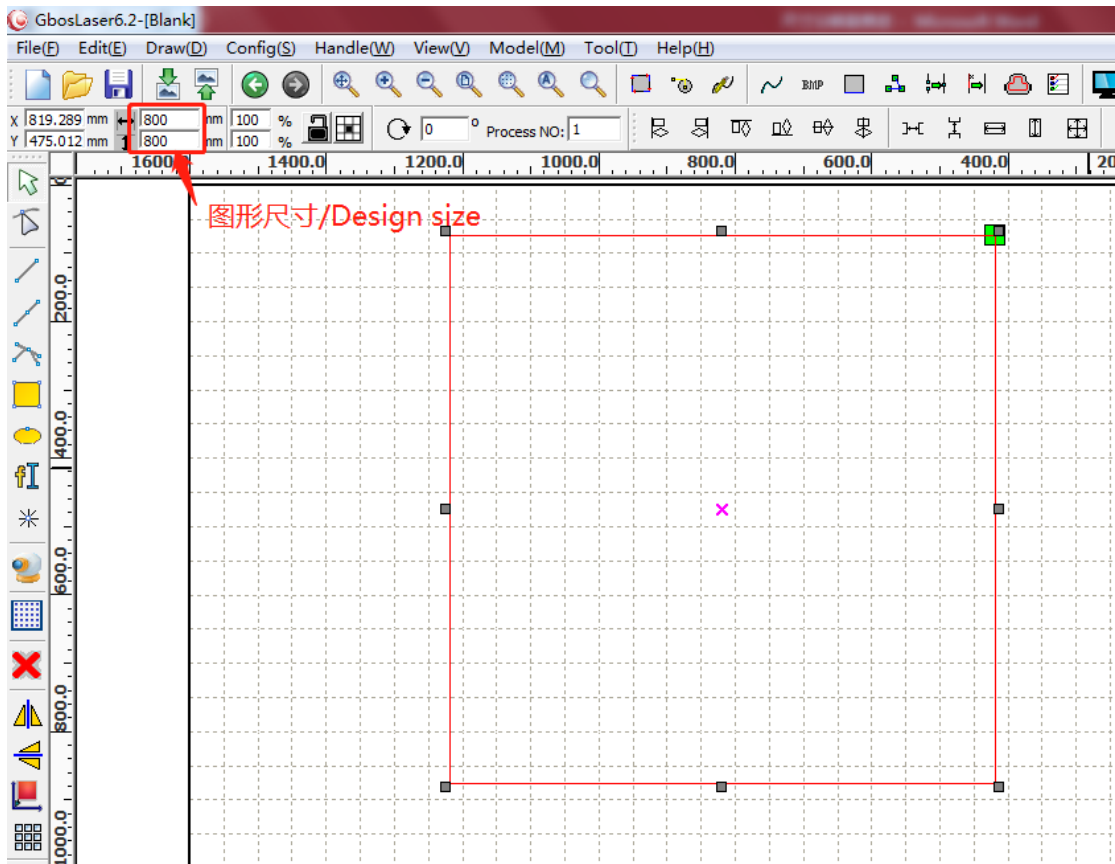

2. 进入厂家参数,密码是 gbos88 或者是 rd8888/open vendor setting , password is gbos88 or rd8888.

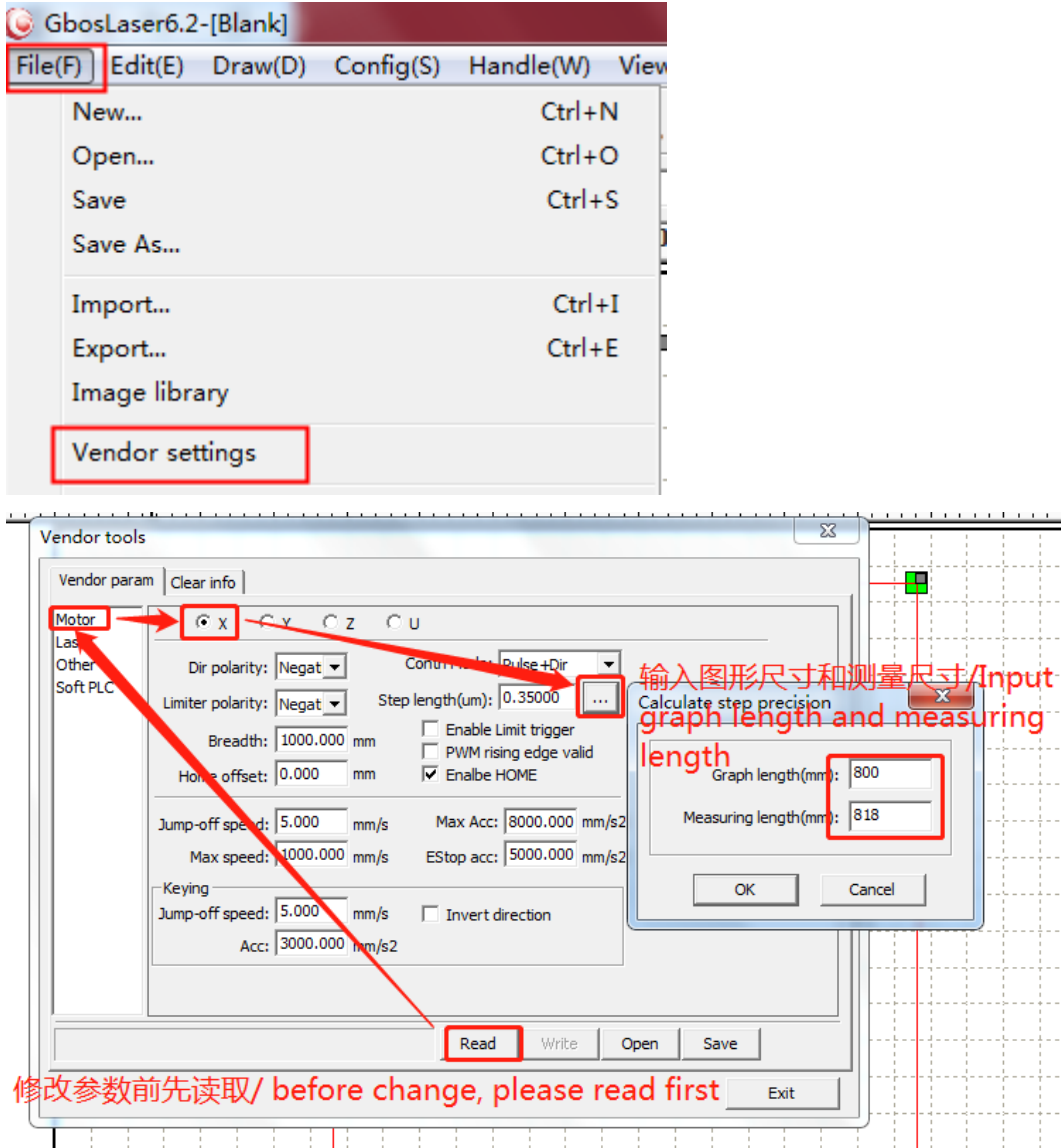

修改参数后, 必须点击写入才能保存/after change the setting, must to click write to save.

3. Y 轴尺寸修改同理/For Y axis is the same step to do it .

Finish!